

DIRECT DRIVE

PLEASE NOTE:

It is important to keep the “RESET” code sticker for future use or troubleshooting. Reset code is the 9 digit number after “Rst” on the small white sticker.



Programming Menu for Wireless Keypad

STEP 1: KEYPAD ACTIVATION (FIRST USE ONLY)

1. Press the # button until the red and green LEDs light up (5-6 sec.)

STEP 2: PROGRAMMING ACCESS CODE

1. Press * button on the Keypad
2. Press 0000 (code from factory)
3. Press * button
4. Press desired access code (max. eight digits)
5. Press * button (red and green LEDs light up)

STEP 3: PROGRAMMING KEYPAD TO CONTROL HOUSING

1. Press Learn button on control housing once (solid LED)
2. Enter access code immediately on the Keypad
3. Press * button
4. Enter code again (door will activate)

CHANGING THE ACCESS CODE

1. Press * button on the Keypad
2. Enter existing access code
3. Press * button
4. Enter new access code (max. eight digits)
5. Press * button (red and green LEDs light up)

Note: 0000 (factory setting) will activate door. To change the access code see “Changing the access code” (above).

ERASE ACCESS FROM KEYPAD

(This is helpful when you don't remember the access code)

1. Press * button on the Keypad
2. Press # button
3. Enter 9 digit reset code
4. Press * button
5. Press # button (red and green LEDs light up)

We strongly suggest attaching the RESET code sticker to the Control Housing after Keypad setup is complete!